



IN-CMP3528

User manual

Blick Store

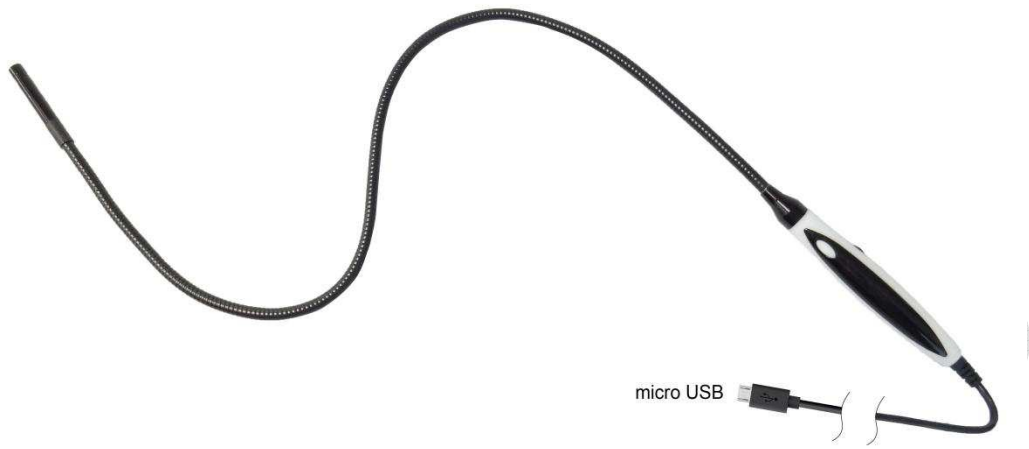

A handy pipeline inspection device helps you search inside hard to reach places.

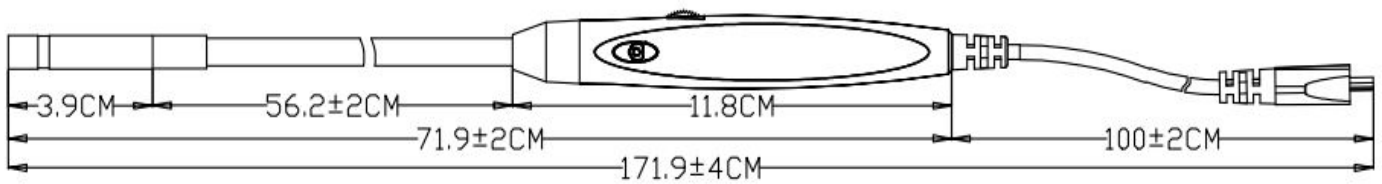

- **Handheld Endoscope**
- **Flexible Cable**
- **USB Connection**
- **Snap Shot Button**
- **Adjustable Dimmer LED Lighting**
- **Support Android 4.0 above that with OTG function.**
- **PC compatible (Windows 10/8/7, Mac OSX 10.4 above)**

Specifications

- PE covered cable with ABS handler
- Flexible cable neck with handler: **71.9** cm long
- Flexible cable neck: **56.2** cm long
- Flexible cable neck diameter: **6.5** mm
- USB cable: 100 cm USB **2.0** interface
- Camera head outer diameter is **8.0** mm
- **1/9"** VGA CMOS: 648 x **488** Pixels
- Lens: F#:2.8 viewable of angle:54°
- Focal distance: 3 cm ~ infinite
- Frame Rate up to 30fps@VGA resolution
- Snapshot & LED lighting adjustable
- Water resistant camera head with **4** dimmable white LED lighting



Package Contents

USB endoscope


Application CD (**Compatible with Windows 10/8/ 7, Mac OSX 10.4 or later**)

Hook, magnetic & mirror attachment for the camera head

USB connector (Mirco USB transfers to USB)



Main & Accessories Parts list

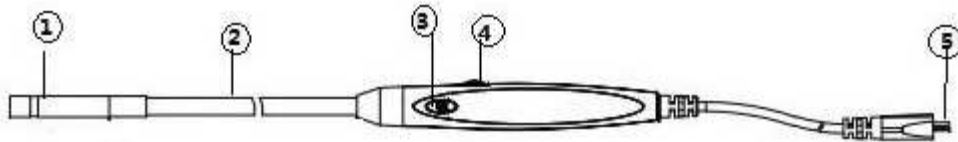

- 1.Camera
- 2.Flexible tube
- 3.Snap Shot button (For Windows PC only, not for Android Smart phone)
- 4.LED adjust wheel
- 5.Mirco USB connector


More description...



While using it for Android 4.0 above smart phone or tablet PC that with OTG function : For example Samsung Galaxy S3(i9300, i9308), S4(i9500, i9508), S5, S6; Note 2, 3 & 4; Sony Z2 L50H, LT26i; Nexus 5.

Please Install i-Snakescope OTG APP. first.from Google Play



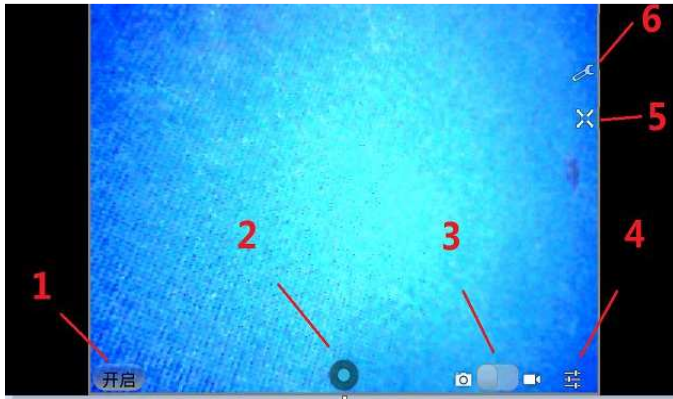

1. Open or close the screen display function

Photo/record status icon


Photo/Record switcher

2. Menu

3. Pixel selection

4. Set up

Menu (4) Control the bellowed tool file to open or hide

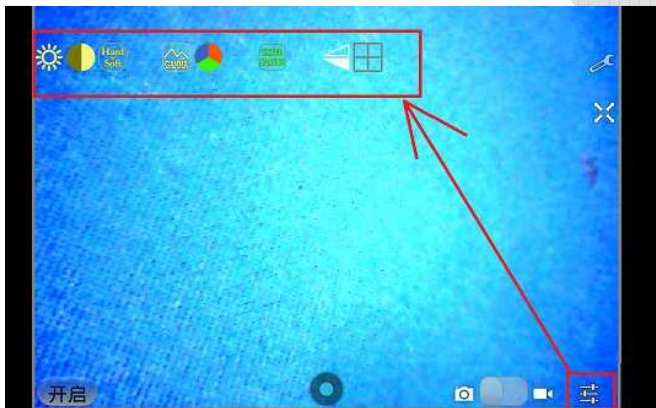

Pixel selection (5), allow user to choice different display pixels, such as: 160X120,176X144, 320X240, 352X288, 640X480.



Set up (6) Allow user proceed some parameters setting like FPS etc.

Tool Bar :



- 5. Lightness
- 6. Contrast
- 7. Hard or Soft
- 8. Gamma
- 9. Color
- 10. White balance
- 11. Rotation
- 12. Central lines

The photo or video that user takes would automatically store in his Android devices.

While using it for Windows PC, please install the attached CD driver.

While using it for Apple's Mac, please use the pre-installed Photo Booth in Mac.

Technical Data

Resolution	640 x 488 Pixels (VGA)
Frame rate	30 fps (pictures/sec)
ImageSensor	1/9"CMOS
White comparison	automatic
Exposure to light	automatic
Video format	AVI
Camera illumination	4 LEDs, white
USB port	USB2.0
Power Supply	5V via USB
Ambient/operating temperature	0 to +45°C
Cable length:	approx. 200 cm
Minimum Bending radius	4.5 cm
Diameter of camera head	8.0 mm
Lens coverage	54°
Focus	>3 cm
Weight without accessories	approx. 126 g

WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.



Email: service@blick-store.de

Tel.: +49 2433-9642580

Fax: +49 2433-964258

Technischer Support Montag bis Freitag von 13:00 bis 17:00Uhr

Wenn weitere Informationen benötigt werden überprüfen Sie bitte zuerst ob auf der www.blick-store.de im Bereich Anleitungen des jeweiligen Produktes zusätzliche Dokumente zur Verfügung stehen.